

ADA SIGN INSTALL GUIDE

READ ALL INSTRUCTIONS BEFORE INSTALLING

MATERIALS / TOOLS REQUIRED

- Non-Corrosive Silicone
- Caulk Gun
- Tape Measure
- Level
- Painter's tape
- Pencil

RECOMMENDED CLEANING MATERIALS

- Lint-free or microfiber cloth
- Mild soap and warm water

IMPORTANT!

Surface must be clean, free of any wet paint or debris, and completely dry for 72 hours prior to installing signs.


1 MEASURE & MARK

Measuring from the floor, mark 48" up and 18" from handle-side of the door frame.

The sign should be positioned center of the 18".

The baseline of the braille should be 48" from the floor.


Add light pencil marks of these measurements, as well as the left side of the sign, and bottom of the sign for increased accuracy.

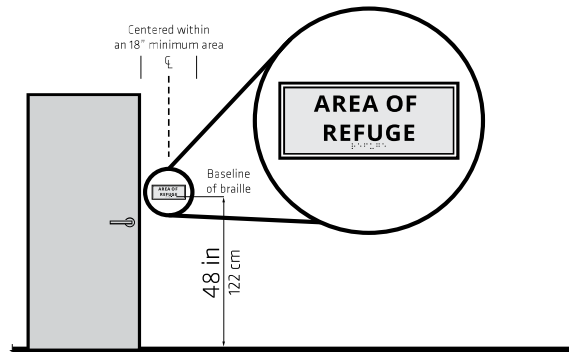

2 ADD ADHESIVE

For application on drywall or brick. Apply Non-Corrosive Silicone to back of sign. Silicone should be applied slightly thicker than the VHB tape. Be sure silicone is applied in the middle, away from the edge of the sign so silicone doesn't ooze and become noticeable.


For application on glass. Clear non-Corrosive Silicone is optional. *If included, see additional instructions for applying vinyl backers.*

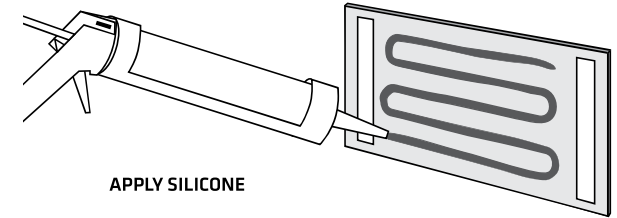

3 POSITION & APPLY

Remove backer on tape. Very lightly apply the sign with silicone on the back to the surface. Carefully position the sign on the markings you made, **be sure NOT to apply pressure on tape.**


Once correctly positioned, check that the sign is level. Make any fine adjustments before moving to the next step.

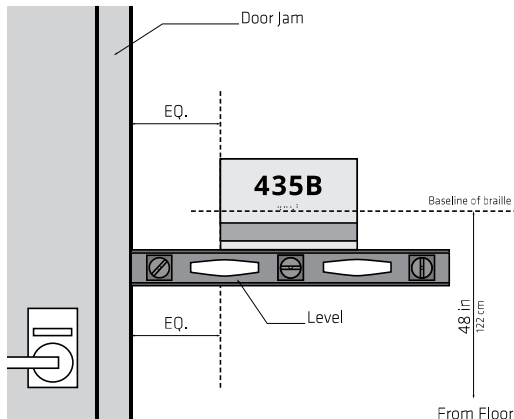

4 PRESS & SECURE

Once correctly positioned and level, apply even pressure so the tape adheres to the surface. If any silicone seeps out, wipe it off the surface immediately before it dries.

The silicone is the primary adhesive. The VHB tape only provides temporary hold while the silicone cures.

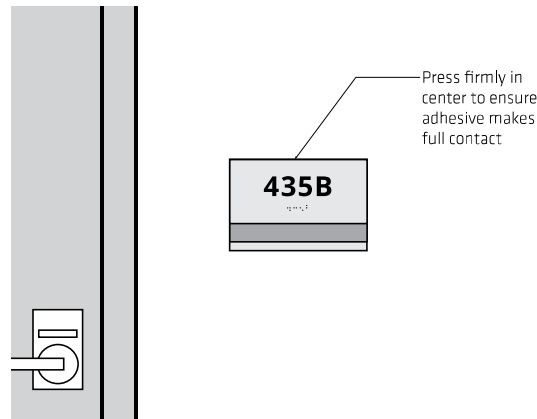

5 CLEAN

Remove fingerprints from sign face and edges. Use mild soap and water to clean the sign and surface.

DO NOT use ammonia or alcohol based cleaners.

